




Assemble steps

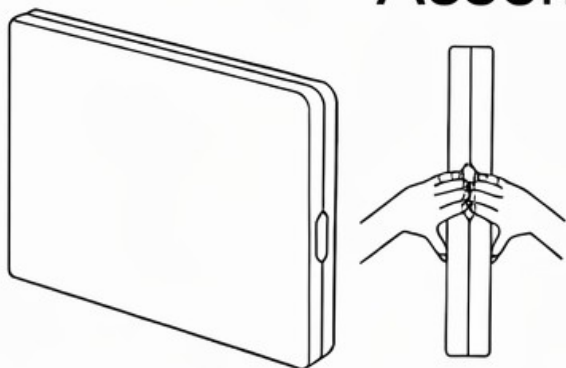

Crack the table open with both hands.

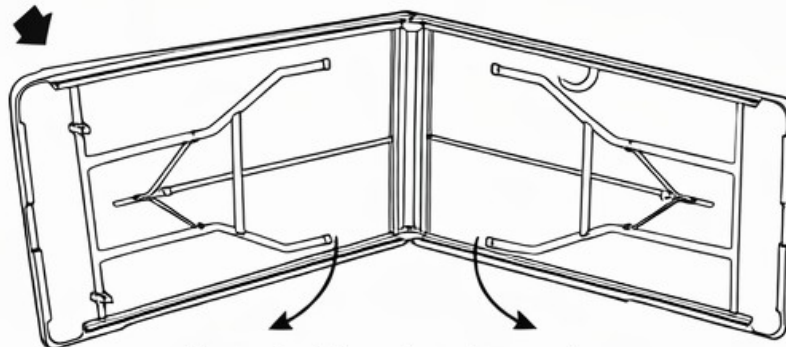

Spread all four legs out.

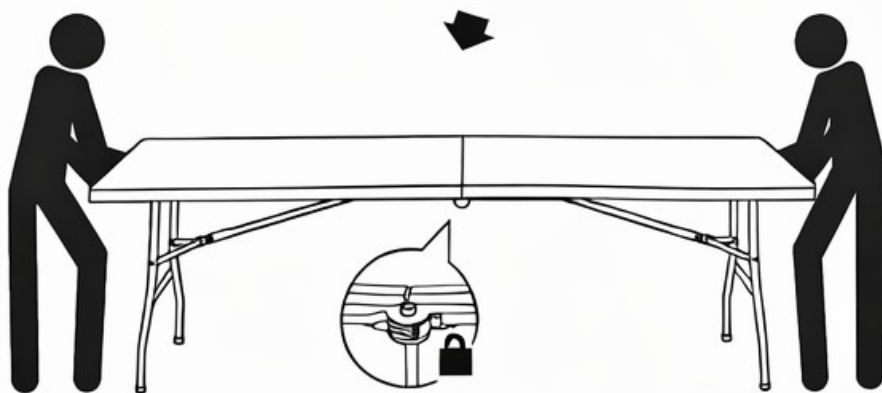


Turn the table to a usable state.




The maximum bearing capacity of the table is 160kg.

Folding way

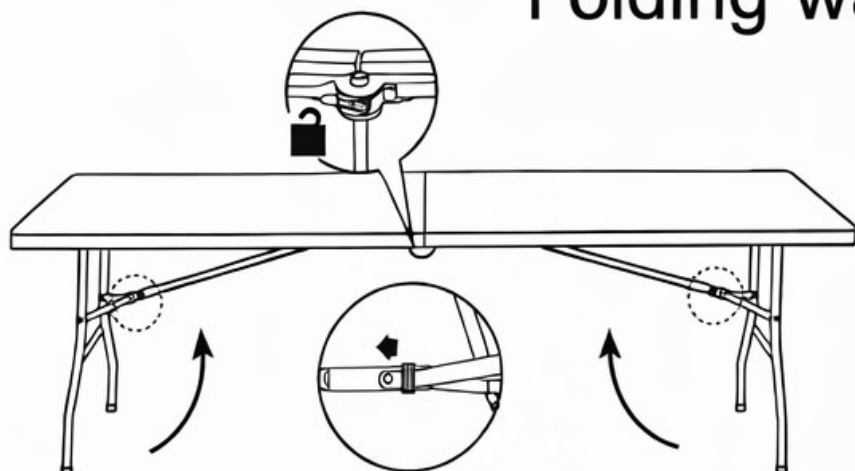

Untie the hoop that holds the bracket.

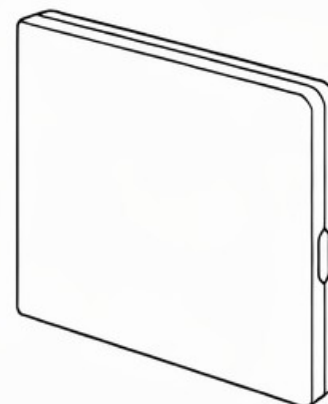

Fold the sides of the table.